
TABLE OF CONTENTS

	PAGE
Main Data and Specifications	06F- 1
Torque Specifications	06F- 3
Standard Bolts	06F- 3
Special Parts Fixing Nuts and Bolts	06F- 4
Recommended Liquid Gasket	06F- 12
LOCTITE Application Procedure	06F- 13
Servicing	06F- 14
Engine Assembly	06F- 28
General Description	06F- 28
Removal and Installation	06F- 29
Engine Repair Kit	06F- 43
Disassembly	06F- 44
Inspection and Repair	06F- 62
Reassembly	06F- 97
Lubricating System	06F-132
Main Data and Specifications	06F-132
General Description	06F-133
Oil Pump (Trochoid Type)	06F-135
Oil Pump (Gear Type)	06F-139
Oil Filter with Built-In Oil Cooler	06F-143

	PAGE
Cooling System	06F-147
Main Data and Specifications	06F-147
General Description	06F-149
Water Pump	06F-150
Fuel System	06F-154
Main Data and Specifications	06F-154
General Description	06F-155
Injection Nozzle	06F-159
Injection Pump Data	06F-175
Turbocharger	06F-180
Main Data and Specifications	06F-180
General Description	06F-181
Troubleshooting	06F-185